



Easy Setup

Prolon Cloud Communication

BEFORE GETTING STARTED

- Although not required, it is highly recommended to have a PL-485-BT converter handy in case a direct connection must be made.
- To enable cloud communication, there must be an internet connection available to:
 - The computer via WiFi or network cable.
 - The PL-NC2000 Network Controller via network cable.
- To setup and access the cloud communication, the user must have previously created a free Prolon account in Focus and must be logged into the account.

STEPS 1, 2 & 3 are required if the existing PL-NC2000 Network Controller is not running version 7.1 or higher. If the PL-NC2000 is already running this version, PROCEED TO STEP 4.

- 1** Install or update the Prolon Focus software to Focus 7.1 or higher. (www.proloncontrols.com)
- 2** Locate Network Controller firmware file (BIN file)
 - Ensure that the BIN file is located in the Prolon Controls folder.
 - File path on desktop:
C:\ProLon\Focus v.7.1.0\NC2000_V710_ISP.bin
 - The BIN file can also be downloaded from Prolon's FTP site:
[Click here to download.](#)
- 3** Update the PL-NC2000 Network Controller firmware to Version 7.1 or higher (Figure 1-2)
 - Connect to PL-NC2000 Network Controller via serial or TCP/IP
 - Double-click the Network Controller icon
 - Config → Device
 - Press on "Reprogram" button
 - Select the BIN file from Step 2, and press on "Start" button to update the Network Controller.
- 4** Set Network Controller IP Settings (Figure 3)
 - Connect to PL-NC2000 Network Controller via USB, serial or TCP/IP
 - Double-click the Network Controller icon
 - Config → Communication
 - Ensure the "Allow Cloud Communication" box is checked
 - Set the IP mode to DHCP – OR – Static IP + enter valid Local Area Network settings (IP Address, Subnet Mask, Default Gateway)
 - Press Apply
 - Reset the PL-NC2000 Network Controller (Config → Device → "Reset" button)



Figure 1

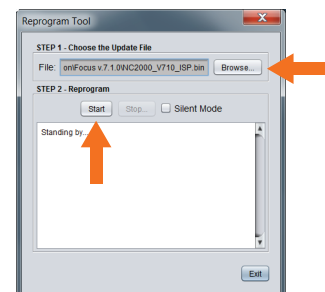


Figure 2

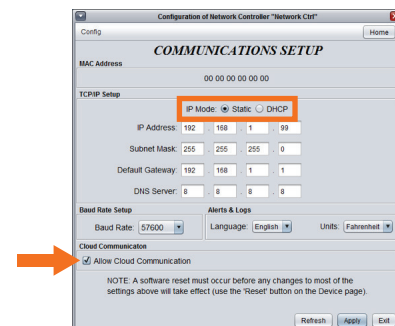


Figure 3



- 5 Retrieve NCID (Figure 4-5)
 - Connect to PL-NC2000 Network Controller via USB, serial or TCP/IP
 - Right-click the Network Controller icon
 - Select "View NCID"
 - Select "Copy to Clipboard"
- 6 Disconnect communication with the PL-NC2000 Network Controller
 - Click on the "Disconnect" button in the Connection side panel
- 7 Claim the PL-NC2000 Network Controller (Figure 6-7)
 - Access Connection menu:
Project → Setup → Connection tab
 - Select Type: "Cloud"
 - Below, click on "Claim NC"
 - Right click and "Paste" NCID. Press "Claim" button.
 - Click on Save
 - Click on the "Connect" button in the Connection side panel
- 8 Confirmation Cloud communication is active (Figure 8)
 - Upon clicking on the "Connect" button, a green checkmark will appear thus confirming the communication is now active.

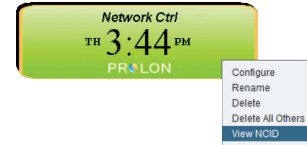


Figure 4

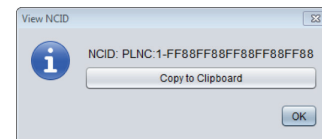


Figure 5

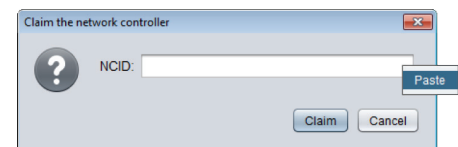


Figure 6

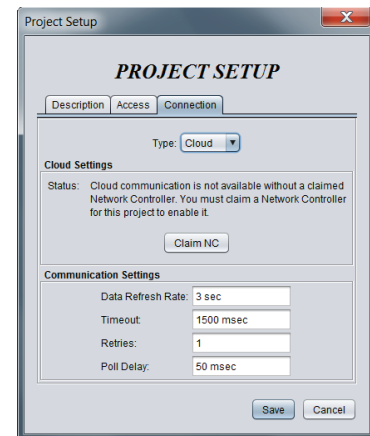


Figure 7

 


Figure 8