



## Communication Wiring


### Shielded Wire Connection

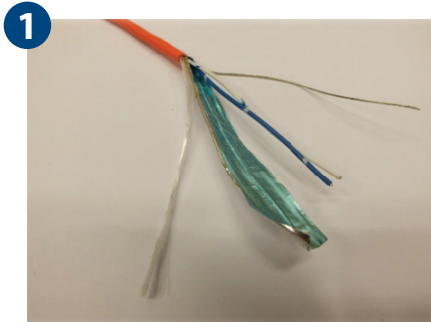

Strip only the outer jacket back 2", taking care to not damage the wires inside.

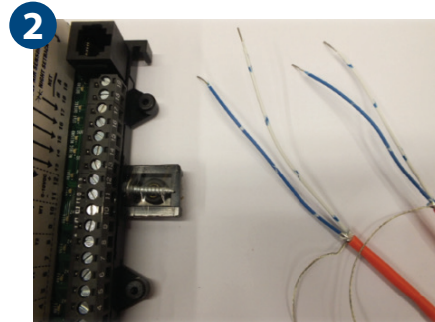


Remove foil and support filament (when applicable), separate all wires, and strip individual insulated conductors.

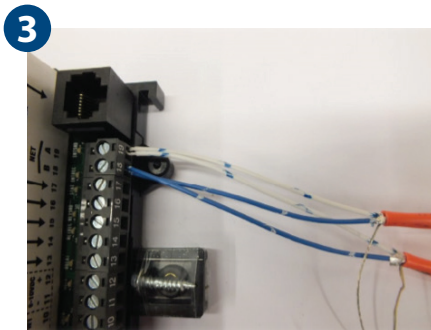


Match insulated conductors, twist together, and install under communication terminal screws.

**Note:** There should never be more that 2 communication wires installed under a single screw.

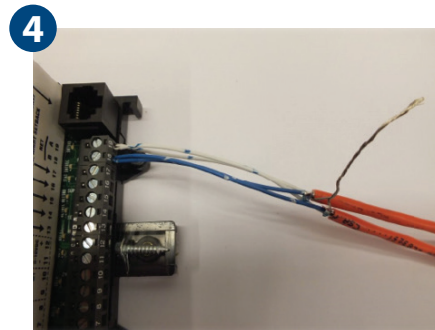

Twist shield wires together to form good electrical connection.

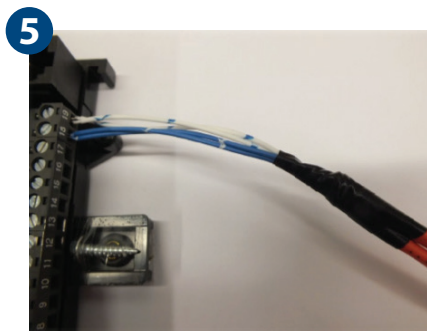

Secure and insulate exposed shield wires to avoid accidental grounding.